




Install Guide & Tips – Control Joint Backer – Single Stud

Fire Rated Control Joints - Vertical Application

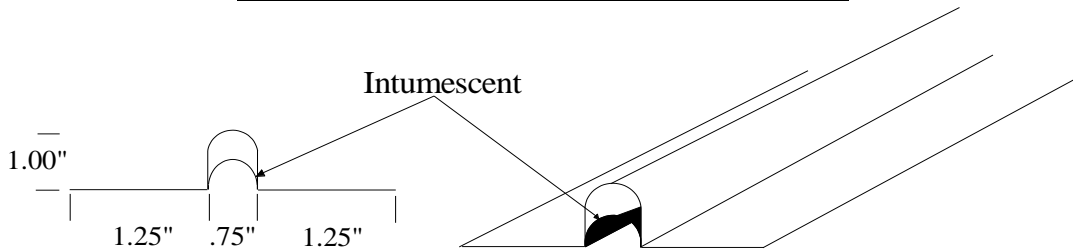


Part #	Intumescent Width	Profile Width	Gauge
CJB-18	1.25"	3.25"	.018

Installation:

- Locate first flange of CJB between wall "stud" and wall sheathing
- Fasten CJB max. 8" O/C utilizing wall sheathing fasteners for attachment
- Span wall sheathing from adjacent "stud" and attach to second CJB flange
- Edges of wall sheathing align with edges of Safti-Seal FRG material

Rated 1 hour - Top View CJB at Stud/Jamb (Single Side & Back-to-Back)

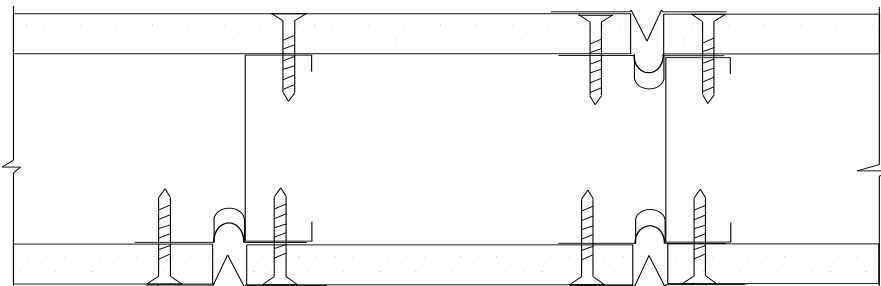

Rated 2 Hour - Top View CJB at Stud/Jamb (Single Side & Back-to-Back)

