





Install Guide & Tips – **SCAB** – Cutout Flanges Cavity Obstruction

Safti-Seal Penetration Fire Stop

Vertical “cavity obstruction” such as pipe, conduit, cable, etc... penetrating floor assembly and located inside wall cavity. Install steel continuous angle backing (SCAB) profile to maintain code certified backing of continuous smoke, sound, and fire rated joint protection materials.

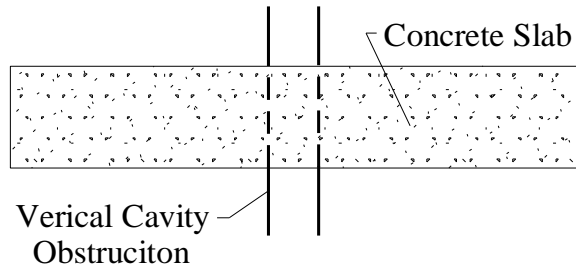

- 1) Terminate Ceiling Runner or Track flanges a max 2” shorter than SCAB profile to allow for min 1.00” overlap of SCAB onto track profiles (both ends)

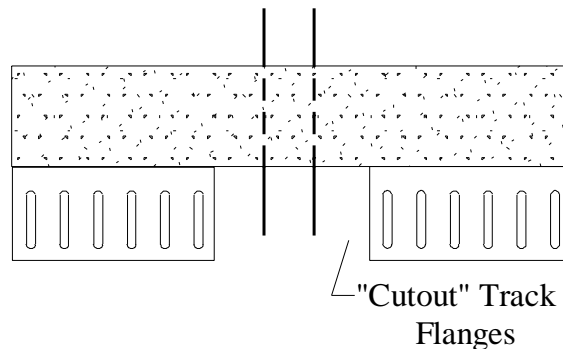

- 2) Install Safti-Seal SCAB friction fitting the ½” horizontal leg of SCAB profile between ceiling runner and overhead structure overlapping runner flanges a min 1 ½” (both ends) – Install FRG, RCG, or SSG joint protection continuous.

